

Step 1.


Remove component.

Step 2

Site Preparation

Step 3


Insert Nozzle Part # 6001729

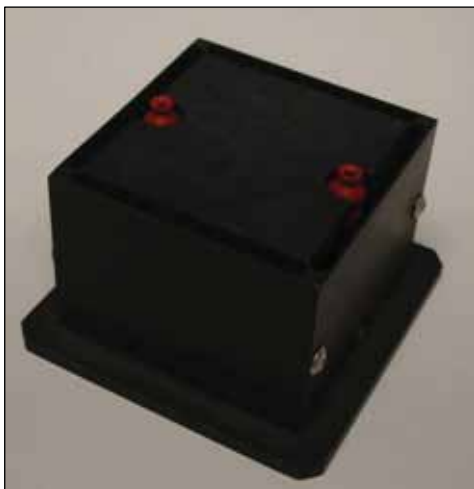

Step 4

Place Component in Stencil Holder Part # 6001775

With Stencil Part # 6001763

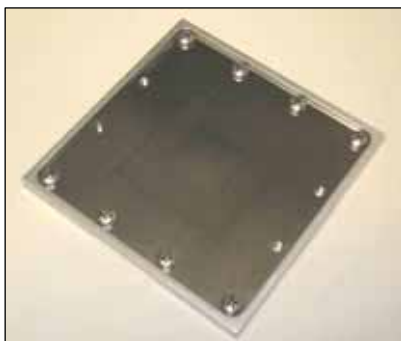



Step 5

Turn over 775 Socket and stencil, Apply Paste




Step 6

Remove Universal Nest, Replace with Special Nest Part #6001764

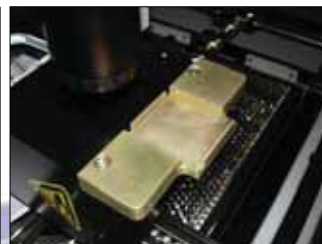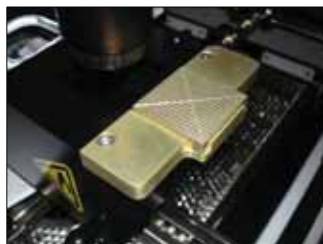

Step 7

Insert New Socket, with Stencil & Stencil Holder on Nest

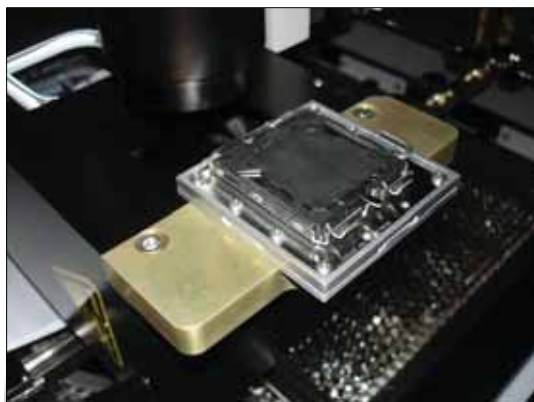

Step 8

Proceed with "Pick from Nest" Step.

**Conceptronic. We make technology simple.**